


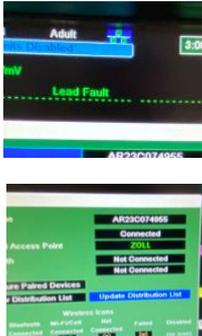

<p>1</p>	<p>Power on. The device will automatically perform a self-check. Green LAN network Connected icon appears after approx. 40 seconds.</p>	
<p>2</p>	<p>Update Distribution List (confirms connection to server). Highlight the green LAN network icon in blue by using the navigation keys and pressing select. This will bring you to the Wireless pop-up menu. Use the navigations key to highlight the "Update Distribution list" option and press select.</p>	
<p>3</p>	<p>This will initiate contact with the sever to look for any updates and verify 2-way communication. The green transmission LED will illuminate and the "transmitting" message will show on screen. On completion the top green LED will turn off and a "transmission successful" message will appear briefly.</p>	
<p>4</p>	<p>The same process can be used by the crew at any point during the shift if they are experiencing any transmission issues. All transmission of data, 12 Leads & case reviews all go to the same sever using the same pathways.</p>	